

程式安裝教學 取得安裝檔

https://goo.gl/z4EdSx

https://goo.gl/ScJMgH





32M 20180825. msi



🖷 RCAD Building 32M Setup

Welcome to the
RCAD_Building_32M Setup
wizard
The Setup Wizard will install RCAD, Building, 32M on your
computer. Click "Next" to continue or "Cancel" to exit the
Setup Wizard.
· · · · · · · · · · · · · · · · · · ·
< Back Next > Cancel

×

Select Installation Folder		
This is the folder where RCAD_Building_32M will be installed.		21
To install in this folder, dick "Next". To install to a different folder, er "Browse".	ter it below or o	dick
Enldant		
C:\Program Files (x86)\RCAD\RCAD_Building_32M\	Browse	2
C:\Program Files (x86)\RCAD\RCAD_Building_32M\	Browse	2
_oider: C:\Program Files (x86)\RCAD\RCAD_Building_32M\	Browse	2
C:\Program Files (x86)\RCAD\RCAD_Building_32M\	Browse	3
C:\Program Files (x86)\RCAD\RCAD_Building_32M\	Browse	2
C:\Program Files (x86)\RCAD\RCAD_Building_32M\	Browse	2
C:\Program Files (x86)\RCAD\RCAD_Building_32M\	Browse	2

使用者帳戶控制

您是否要允許這個來自未知發行者的 App 變 更您的裝置?

C:\Users\RCAD-USER3\Desktop\RCAD \RCAD_Building_32M_20180825.msi

發行者: 未知 檔案來源: 此電腦上的硬碟

顯示更多詳細資料



 \times





< Back

I accept the terms in the License Agreement

Cancel

P	Microsoft Office Access database engine 2007 (English) Setup — 🛛 🗙
	Microsoft Office Access database engine 2007 (English)
	Maintenance Mode Options
	 Reinstall or Repair Microsoft Office Access database engine 2007 (English) to its original state. Uninstall Microsoft Office Access database engine 2007 (English) from this computer.
	如果步驟6出現的是這個視窗 可跳過步驟7-8
	< Back Next > Cancel

🛃 Microsoft Office Access database engine 2007 (English)	Setup -	- 🗆	×
		_	_
Microsoft Office Access database engine 2007 (English)			
		Ē	
Choose where to install Microsoft Office Access database engine	2007 (Englis	h) 🤷	
Install Microsoft Office Access database engine 2007 (English)	to:		
C: Program Files (X86) Wilcrosoft Office (Br	rowse	
	Л		
	Ţ		
< Back	Tostall	,	cal

🖶 Microsoft Office Access database engine 2007 (English) S...

 \times

Microsoft Office Access database engine 2007 (English) Setup has completed successfully.

OK

 $\widehat{}$









1. 到此路徑資料夾

→ 本機 → 本機磁碟 (C:) → Program Files (x86) → RCAD → RCAD_Building_32M → bin

2. 開啟RCAD_Building.exe



RCAD_Building	v2018.8.25.1, 32M	×
1.程式路徑	C:\Program Files (x86)\RCAD\RCAD_Building_32M\bin\	ОК
2.參數名稱	5	Cancel
3.參數檔案	, C:\Program Files (x86)\RCAD\RCAD_Building_32M\bin\RCAD_BUILDING.ini	永遠提示 ☑
4.鋼筋表	.\RCAD_Building_constants.ini	
5.結構標準圖	C:\Program Files (x86)\RCAD\RCAD_Building_32M\bin\RCAD_Building-simple.mdb	
6.棋版檔目錄	C:\Program Files (x86)\RCAD\RCAD_Building_32M\bin	J

RCAD Building.

exe

2018/09/17 (三版更新)

~ Ū

